

MODERNIZING A BPF TOILET BY ANN BRAMLET

Tools needed: craft knife, sanding file, The Ultimate Glue or a glue for plastic.




Cut off the tall pipe at the toilet and sand the cut until smooth.



Cut off a short piece of the silver handle on the side of the tank.

Sand off the rest of that silver part, so the tank is all white on that side. Glue the short piece of handle to the front of the tank.

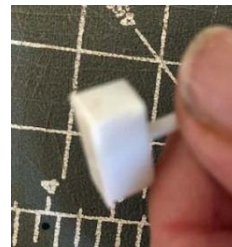

Cut off the pipe below the tank.

Apply glue to the edge of the toilet and glue the tank to the toilet, with about 1/2 of the tank extending beyond the back of the seat of the toilet. Be sure the tank is centered, side to side and let it dry.

